



# Introducing the 3M Aura 9300+ Series Disposable Respirators



### Breathing ease

#### Low breathing resistance filter technology

- gives effective filter performance whilst lowering resistance to breathing resulting in improved comfort

#### 3M™ Cool Flow™ Valve


- effectively removes heat build up to provide a cooler and more comfortable wear
- removes exhaled air and minimises the risk of fogging eyewear



### Clear vision

#### Embossed top panel

- helps reduce the fogging of eyewear

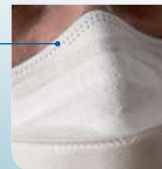

### Sculpted nose panel

- curved, low profile design conforms well to nose and facial contours
- helps provide a good field of vision
- improves compatibility with eyewear



### Convenience

- flat-fold; easy to store when not in use
- hygienic individual packaging helps protect the respirator from contamination before use
- meets EN 149:2001+A1:2009 requirements

#### Innovative chin tab

- improves ease of donning and adjustment to help achieve a comfortable fit



### Face and head comfort

#### Design and material

- ingenious 3-Panel design fits a wide range of face shapes and sizes to accommodate your facial movements
- collapse resistant; ideal for work in hot humid environments
- stays securely in place, helping to provide a good, comfortable seal
- large soft nose foam material and smooth inner cover web both feel incredibly soft on the skin and help to create a comfortable environment for the face
- extremely lightweight

## The Power to Protect Your World™



**3M Personal Safety**  
**3M United Kingdom plc**  
3M Centre  
Cain Road, Bracknell  
Berkshire RG12 8HT  
Tel: 0870 60 800 60  
[www.3M.co.uk/safety](http://www.3M.co.uk/safety)

**3M Ireland Limited**  
The Iveagh Building  
The Park  
Carrickmines  
Dublin 18  
Tel: 1 800 320 500



Scan this QR code with your smartphone to be directed to further information on 3M™ Aura™ 9300+ Disposable Respirators or visit: [www.3M.co.uk/Aura9300plus](http://www.3M.co.uk/Aura9300plus)

16691  
Please recycle. Printed in UK.  
© 3M 2013. All rights reserved.



# Fitting Instructions

Disposable respirators are only effective when there is a good seal between the edges of the respirator and your face. If the seal is poor, protection is compromised as contaminated air can leak in through any gaps.

**These fitting instructions must be followed each time a 3M™ Aura™ 9300+ Series respirator is worn.**



Make sure that your face is clean shaven. Respirators should not be worn with stubble, beards or other facial hair under the area of the face seal as these can prevent a good seal to the face.



Make sure that long hair is tied back and jewellery is removed so that it does not interfere with the seal to the face.



1. With the reverse side up and using the tab, separate the top and bottom panels of the respirator to form a cup shape. Bend slightly at the centre of the noseclip.
2. Ensure that both panels are fully unfolded.



- 3a. Cup the respirator in one hand with the open side towards your face.



- 3b. Take both straps in your other hand. Hold the respirator under your chin, with the nosepiece facing upwards and pull the straps over your head.



4. Locate the upper strap across the crown of the head and the lower strap below your ears. The straps must not be twisted. Adjust the top and bottom panels for a comfortable fit, ensuring that the panels and tab are not folded in.



5. Using both hands, mould the noseclip to the shape of the nose to ensure a close fit and a good seal.  
**▲ The respirator may not fit as well if you pinch the noseclip using one hand. Use two hands.**



6. Perform a fit-check by covering the front of the respirator with both hands taking care not to disturb its fit.  
If you're using an unvalved respirator, **exhale** sharply.  
If you're using a valved respirator, **inhale** sharply.  
If air leaks around the nose, readjust the noseclip to eliminate leakage then repeat the fit check. If air leaks at the respirator edges, work the straps back along the sides of the head to eliminate leakage then repeat the fit check. **If you cannot achieve a proper fit, DO NOT enter the hazardous area. Consult your supervisor.**

Users of 3M Aura 9300+ should be fit tested. Call the 3M Safety Services Coordinator on **0845 601 3457** or visit the website for further information.

The Power to Protect Your World<sup>SM</sup>



**Safety Solutions**  
**3M United Kingdom plc**  
3M Centre  
Cain Road  
Bracknell  
Berkshire RG12 8HT  
Tel: 0870 60 800 60

**Safety Solutions 3M**  
**Ireland Limited**  
The Iveagh Building  
The Park  
Carrickmines  
Dublin 18  
Tel: 1 800 320 500



Scan this QR code with your smartphone to be directed to further information on 3M™ Aura™ 9300+ Disposable Respirators  
**For more information visit: [www.3M.co.uk/Aura9300plus](http://www.3M.co.uk/Aura9300plus)**  
13898  
Please recycle. Printed in UK.  
© 3M 2011. All rights reserved.